

# INSTALLATION INSTRUCTIONS

## Product

Quick Adjust Upper Tube Assemblies

**QADJ-UPPER-S, QADJ-UPPER-M, QADJ-UPPER-L**

## Date

9/03/99


## Form #

INST2

Quick Adjust upper tube assemblies are designed to allow rotation of the upper tube while keeping the height constant. A set collar is provided with the base to safely maintain the height of the upper tube.

**Note: It is important to carefully follow the directions below to avoid accidental equipment damage or personal injury.**

1. Insert upper tube into any DS style lower tube assembly.
2. Loosen the set collar set screw and adjust upper tube to appropriate height.
3. Tighten the quick adjust handle to maintain upper tube position.
4. Allow the set collar to slide down the upper tube until it contacts the lower tube.
5. Tighten the set collar set screw.
6. The upper unit can now be safely rotated as needed.

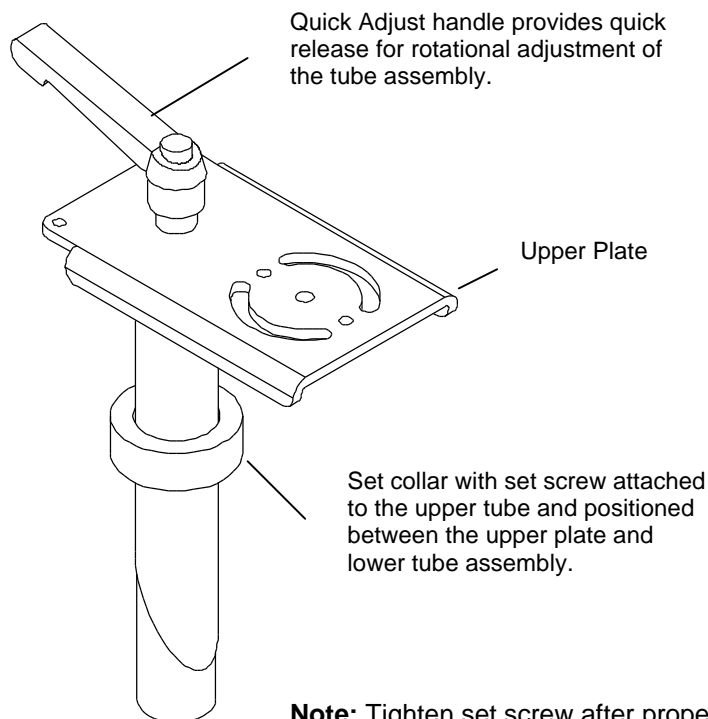

**QADJ-UPPER-S**  
(5.75" Lg. Upper Plate)

**Note:** Tighten set screw after proper height adjustment has been made.

